

ZoomLink+

Quick Reference Guide

A pupils radio aid system consists of two parts:

- Transmitter (worn by teacher) and
- Receivers (worn by pupil)

For audio shoe advice visit www.phonak.com/eschooldesk




On/Off Button



Phonak recommends that you push the Middle "Zoom" button down for 2 seconds to turn off and on for normal teaching.

LCD Display

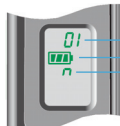


Channel Number
Battery Status
Mic Position
- Superzoom
- Zoom
- Omni (360°)

Synchronising


To synchronise a receiver, turn the ZoomLink+ on within a 50cm range of the receiver. The receiver should beep through the hearing aid to confirm this action.

Change Channel

Push button down with pen to scroll channels. Release to stop and synchronise any receivers within range.

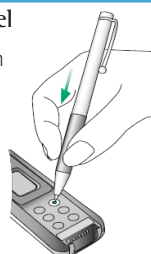

Wearing & Adjustment

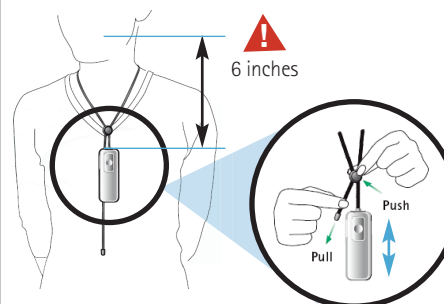

Microphone Directionality

Zoomlink+ has three microphone settings...



Superzoom

Narrow beam directionality for, in exceptional circumstances, pointing at sound source, or extremely harsh teaching environments.



Zoom (Recommended)


The recommended directional setting for everyday teaching scenarios.



Omni-directional

For using in quiet, group discussion situations by placing at the opposite end of the table.


Audio Input

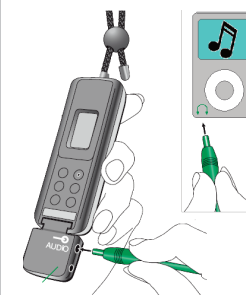

Standard 3.5mm audio cable

Charging

ZoomLink+ interface should be attached to charge the ZoomLink+ or attach external devices.

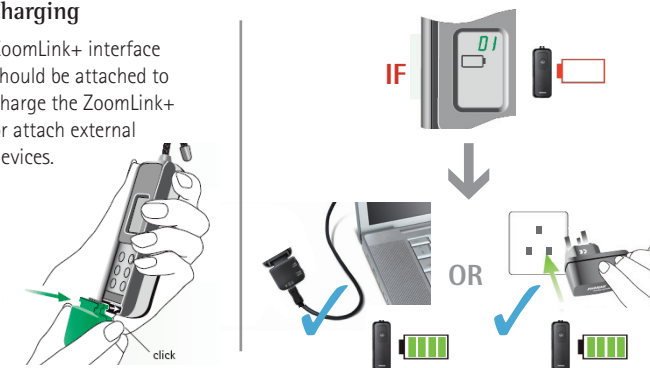

ZoomLink+ Compatibility

Zoomlink+ is fully compatible with ALL of Phonak's FM receivers, past and present (examples shown). Simply turn on the transmitter... and **start teaching!**



For more information about your ZoomLink+ and how to use other functions please consult the user manual, or visit www.phonak.com/eschooldesk

PHONAK life is on